

## Cybex Eagle<sup>®</sup> Hip Abduction/Adduction Owner's Manual

Strength Systems
Part Number 11181-999-4 A





## Cybex Eagle<sup>®</sup> Hip Abduction/Adduction Owner's Manual

Strength Systems
Part Number 11181-999-4 A

Cybex® and the Cybex logo are registered trademarks of Cybex International, Inc. Eagle® and its mark are registered trademarks of Cybex International, Inc.

**DISCLAIMER:** Cybex International, Inc., makes no representations or warranties regarding the contents of this manual. We reserve the right to revise this document at any time or to make changes to the product described within it without notice or obligation to notify any person of such revisions or changes.

© Copyright 2010, Cybex International, Inc. All rights reserved.

Printed in the United States of America.

10 Trotter Drive Medway, MA 02053 • 508-533-4300 • FAX 508-533-5183 www.cybexinternational.com • techhelp@cybexintl.com • 11181-999-4 A



# **Table of Contents**

1 S	afety SafetySafety Guidelines and Practices Warning/Caution DecalsRegular Maintenance Activities Using Proper Form	1-2 1-3 1-5
2 E	xercises Intended Use	
3 C	Contacting Service Contacting Service Ordering parts Return Material Authorization (RMA) Damaged Parts	3-1 3-1
4 A	ssembly Assembly	4-1
5 M	laintenance Daily Procedures	5-4 5-6 5-7



# 1 - Safety

## Safety

Read the Owner's Manual carefully before assembling, servicing or using the equipment.

It is the responsibility of the facility owner and/or owner of the equipment to instruct users on proper operation of the equipment and review all labels.



WARNING: Serious injury could occur if these safety precautions are not observed:

## **User Safety Precautions**

- Obtain a medical exam prior to beginning an exercise program.
- Keep body and clothing free from and clear of all moving parts.
- Inspect machine prior to use. **DO NOT** use if it appears damaged or inoperable.
- DO NOT attempt to fix a broken or jammed machine. Notify floor staff.
- Use the machine only for the intended use. **DO NOT** modify the machine.
- Be sure that the weight pin is completely inserted. Use only the pin provided by the manufacturer. If unsure seek assistance.
- Never pin the weights in an elevated position. DO NOT use the machine if found in this condition.
   See assistance from floor staff.
- Children must not be allowed near these machines. Teenagers must be supervised.
- **DO NOT** use if guards are missing or damaged.
- DO NOT use dumbbells or other incremental weights, except those provided by the manufacturer.
- Inspect all cables and belts and connections prior to use. DO NOT use if any components are worn, frayed or damaged.
- DO NOT remove any labeling from equipment. Replace any damaged labels.
- Stop exercising if you feel faint, dizzy or experience pain at any time while exercising and consult your physician.

#### **Facility Safety Precautions**

- Read the Owner's Manual carefully before assembling, servicing or using the equipment.
- Securely anchor each machine to the floor using the anchor holes provided in each machine.
  - **NOTE:** Cybex is not responsible for the actual anchoring of equipment. Consult with a professional contractor.
  - NOTE: Use fasteners having a minimum of 500 lbs. tensile capacity (3/8" grade 2 bolts or better).
  - **NOTE:** If legs/frame does not contact surface, DO NOT pull down with anchors. Shim any leg or frame not in contact with surface using flat washers.

- Make sure that each machine is set up and operated on a solid level surface. Do not install equipment on an uneven surface.
- Make sure that all users are properly trained on how to use the equipment.
- Make sure there is enough room for safe access and operation of the equipment.
- Perform regular maintenance checks on the equipment. Also pay close attention to all areas most susceptible to wear, including (but not limited to) cables, pulleys, belts and grips.
- Immediately replace worn or damaged components. If unable to immediately replace worn or damaged components then remove from service until the repair is made.
- Use only Cybex supplied components to maintain/repair the equipment.
- Keep a repair log of all maintenance activities.
- Inspect all cables and belts and connections prior to use. DO NOT use if any components are worn, frayed or damaged.

**NOTE:** It is the sole responsibility of the user/owner or facility operator to ensure that regular maintenance is performed.

## Safety Guidelines And Practices

Cybex recommends that all fitness equipment be used in a supervised area. It is recommended that the equipment be located in an access controlled area. Control is the responsibility of the owner. The extent of control is at the discretion of the owner.

It is the responsibility of the purchaser/user of Cybex products to read and understand the owner's manual, and warning labels; as well as instruct all individuals, whether end users or supervising personnel, on proper usage of the equipment.

#### PROPER USAGE:

Use machine only as described in the manual. Failing to follow proper instructions may result in injury.

**Do Not Lean Against or Pull** On the framework, weight stack, or any component, whether machine is at rest or in use. Inappropriate or improper use may result in injury to users or third parties (bystanders).

Do not use machine if it is not located on a solid level surface or is improperly installed.

Provide an adequate safety perimeter between the machine, walls and other equipment to ensure that the facility has the proper clearance for usage and training.

#### **SECURING EQUIPMENT:**

The machine has holes in the feet, which allow for ease in anchoring to the floor. Cybex strongly recommends that, to eliminate rocking, tipping or falling over due to incorrect usage and misuse, equipment be secured to a solid, level surface.

- **1.** The solid, level surface should not deviate more than 1/8" over a 10' distance or as defined and required by local building and architectural codes.
- 2. Anchoring of equipment must be completed by a qualified licensed contractor.

- **3.** Anchoring holes are provided on the feet of the frame. All anchoring locations must be used when anchoring the equipment to the floor.
- **4.** Due to the wide variation of flooring on which machines may be anchored or installed, verify anchoring method and anchoring fasteners with a qualified and licensed contractor.
- 5. A minimum pull out force of 220 lbs/100 kgs is required for each anchor position...
- 6. Do not use machine until it is properly anchored.

#### MAINTENANCE:

Preventative maintenance allows proper equipment operation and reduces the risk of injury. Perform the maintenance requirements as specified in the manual.

#### STANDARD COMPLIANCE:

Cybex products meet or exceed applicable ASTM and EN Standards.



## Warning/Caution Decals

Warning decals indicate a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

Caution decals indicate a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury.

The warning and caution decals are shown on the following page. The diagrams following the decals show where each decal is located.


## **AWARNING**

## SERIOUS INJURY COULD OCCUR IF THESE PRECAUTIONS ARE NOT OBSERVED

- 1. Obtain a medical exam prior to beginning an exercise program.
- 2. Read and understand warning labels and user manual prior to exercising. Obtain instruction prior to use.
- 3. Keep body and clothing free from and clear of all moving parts.
- 4. Inspect machine prior to use. DO NOT use if it appears damaged or inoperable.
- 5. DO NOT attempt to fix a broken or jammed machine. Notify floor staff.
- 6. Use the machine only for the intended use. DO NOT modify the machine.
- 7. Be sure that the weight pin is completely inserted. Use only the pin provided by the manufacturer. If unsure seek assistance.
- 8. Never pin the weights in an elevated position. DO NOT use the machine if found in this condition. Seek assistance from floor staff.
- 9. Children must not be allowed near this machine. Teenagers must be supervised.
- 10. DO NOT use if guards are missing or damaged.
- 11. DO NOT use dumbbells or other incremental weights, except those provided by the manufacturer.
- 12. Inspect all cables and belts and connections prior to use. DO NOT use if any components are worn, frayed, or damaged.
- 13. DO NOT REMOVE THIS LABEL. REPLACE IF DAMAGED.

4605-381**-**4 B



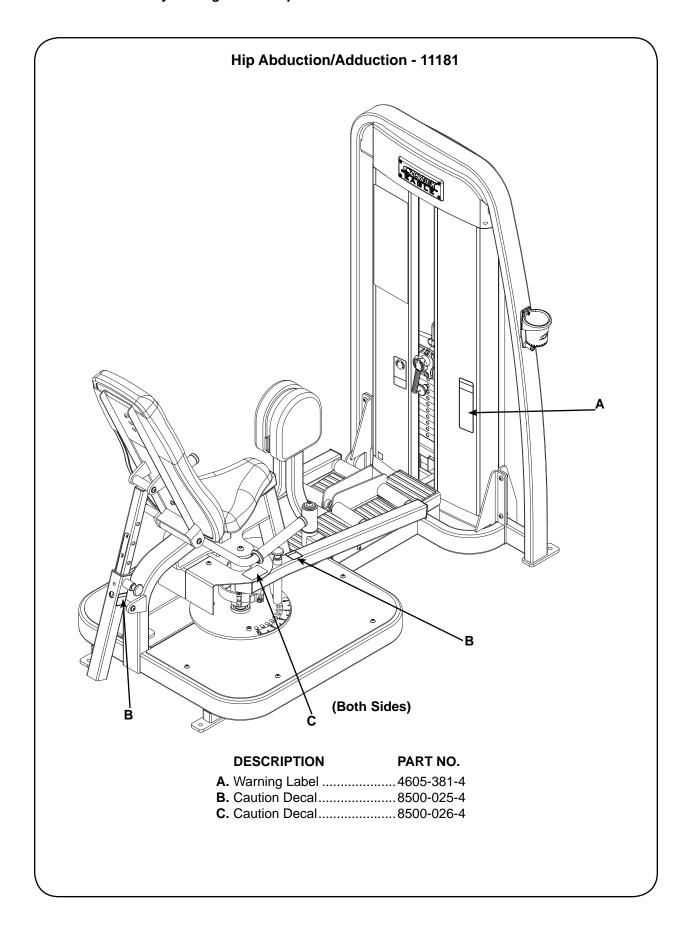

## Regular Maintenance Activities

Preventative maintenance activities must be performed to maintain normal operation of your equipment. Keeping a log sheet of all maintenance actions will assist you in staying current with all preventative maintenance activities. The preventative maintenance actions are described in detail in Chapter 5.

Briefly, they include:

#### **Daily**

1. Clean upholstery.

### Weekly

- 1. Inspect all nuts and bolts for looseness. Tighten as required.
- Inspect all cables and belts for damage or wear (see Chapter 5). If a cable or belt is worn or damaged, immediately discontinue use until cable or belt has been replaced.
- Check for worn handles, worn snap links, and worn warning labeling. Replace all worn parts immediately.
- 4. Inspect for loose or worn grips. Replace all loose or worn grips immediately.
- 5. Inspect for loose or worn grips. Replace all loose or worn grips immediately.
- **6.** Inspect weight stacks for proper alignment and operation. Correct all improper alignmentand operation issues immediately.
- 7. Lubricate guide rods using automotive engine oil only.

#### Yearly

1. Replace all cables and belts at least annually.

## **Using Proper Form**

Before working out, read and understand the exercises located on the placard and in Chapter 2.


## 2 - Exercise


## Intended Use

The intended use of this equipment is to aid or improve general physical fitness and exercise. For Commercial use.

## Instructions

Read and understand all instructions and warnings prior to using this machine. See Chapter 1, Safety in the Eagle Owner's Manual or consult with floor staff.

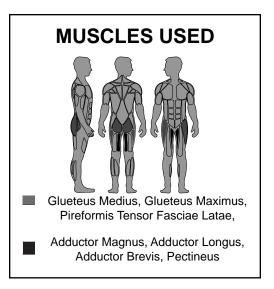

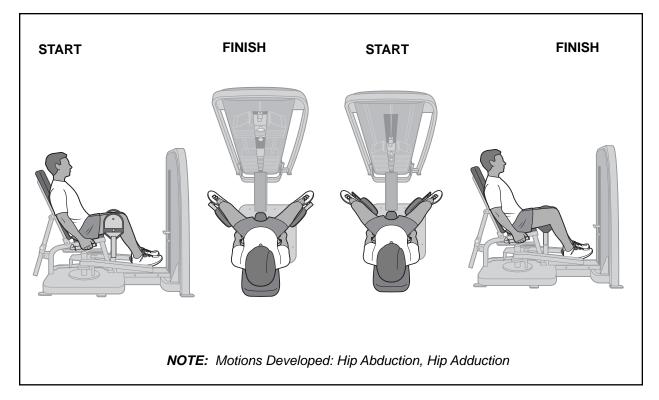

**NOTE:** All adjustment points on the machine have yellow handles or knobs.

NOTE: See next page for "Set Up" and "Movement".

NOTE: Do not turn knob when weight stack is elevated

## Set Up

- 1. *Hip Abduction* Adjust starting position so knees are together with pads outside knees. *Note:* Recline back pad to encourge use of the gluteus medius.
- 2. *Hip Adduction* Adjust starting position for a wide "V" position with pads inside knees.

## Movement

1. Push against pads through a complete range of motion.

## 3 - Customer Service

## **Contacting Service**

Hours of phone service are Monday through Friday from 8:30 a.m. to 6:00 p.m Eastern Standard Time.

For Cybex customers living in the USA, contact Cybex Customer Service at 888-462-9239.

For Cybex customers living outside the USA, contact Cybex Customer Service at 508-533-4300 or fax 508-533-5183.

Find information on the web at www.cybexintl.com or e-mail at techhelp@cybexintl.com.

## **Ordering Parts**

Fax orders to **508-533-5183**. To speak with a customer service representative, call **888-462-9239** (for customers living within the USA) or **508-533-4300** (for customers outside the USA). You may also contact us through e-mail at techhelp@cybexintl.com.

Having the following information ready when calling, will assist our Cybex representatives in serving you.

- Unit Serial Number
- Product Name

The unit serial number and product name can be found on the serial number decal.

- Part Description
- Part Number

Part descriptions and part numbers are located on the web at www.cybexintl.com.

- Shipping Address
- Contact Name

In addition to your shipping address and contact name, your account number is helpful but not required.

## Return Material Authorization (RMA)

The Return Material Authorization (RMA) system outlines the procedures to follow when returning material for placement, repair or credit. The system assures that returned materials are properly handled and analyzed. Follow the following procedures carefully.

Contact your authorized Cybex dealer on all warranty-related matters. Your local Cybex dealer will request a RMA from Cybex, if applicable. Under no circumstances will defective parts or equipment be accepted by Cybex without proper RMA and an Automated Return Service (ARS) label.



Use only Cybex replacement parts when servicing. Failure to do so could result in personal injury.

**NOTE:** All inspections and repairs must be performed by trained service personnel only.

Cybex will void warranty if non-Cybex replacement parts are used.

- 1. Call the Customer Service Hot Line listed above for the return of any item that is defective.
- 2. Provide the technician with a detailed description of the problem you are having or the defect in the item you wish to return.
- 3. Provide the model and serial number of your Cybex equipment.
- 4. At Cybex's discretion, the technician may request that you return the problem part(s) to Cybex for evaluation and repair or replacement. The technician will assign you a RMA number and will send you an ARS label. The ARS label and the RMA numbers must be clearly displayed on the outside of the package that contains the item(s) to be returned. Include the description of the problem, the serial number of the equipment and the name and address of the owner in the package along with the part(s).
- 5. Forward the package through UPS to Cybex.

Attn: Customer Service Department Cybex International, Inc. 1975 24th Ave SW Owatonna, MN 55060

**NOTE:** Merchandise returned without an RMA number on the outside of the package or shipments sent COD will not be accepted by the Cybex receiving department.

## **Damaged Parts**

Materials damaged in shipment should not be returned for credit. Shipping damages are the responsibility of the carrier (UPS, Federal Express, trucking companies, etc.)

**Apparent Damage** - Upon receipt of your shipment, check all items carefully. Any damage seen with a visual check must be noted on the freight bill and signed by the carrier's agent. Failure to do so will result in the carriers refusal to honor your damage claim. The carrier will provide you with the required forms for filing such claims.

Concealed Damage - Damage not seen with a visual check upon receipt of a shipment but notices later must be reported to the carrier as soon as possible. Upon discovery of the damage, a written or phone request to the carrier asking them to perform an inspection of the materials must be made within ten days of the delivery date. Keep all shipping containers and packing materials as they will be needed in the inspection process. The carrier will provide you with an inspection report and the necessary forms for filing a concealed damage claim. Concealed damage claim is the carrier's responsibility. Cybex, if applicable. Under no circumstances will defective parts or equipment be accepted by Cybex without proper RMA and an Automated Return Service (ARS) label.


# 4 - Assembly

#### **TOOLS REQUIRED**

- 7/32" Allen wrench
- 3/4" Allen wrench
- 9/16" Wrench
- 3/4" Socket or wrench
- External snap ring pliers
- Phillips screwdriver
- Medium weight automotive engine oil
- Torque Wrench

**NOTE:** Two people will be required for this procedure.

**NOTE:** It is the responsibility of the facility owner/owner of the equipment to ensure that there is appropriate clearance around each machine to allow for safe use and passage.

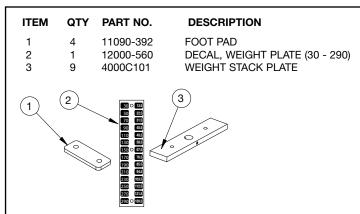

- 1. Read and understand all instructions thoroughly before starting any of the procedures listed on this instruction sheet.
- 2. Verify you have received the appropriate configuration.
  - A. Verify that you received the correct color machine that you ordered.
  - **B.** Verify you received weight plates and weight plate decals.
  - C. Verify you received the Cybex Eagle Hip Abduction/Adduction Owner's Manual.
  - **D.** Verify you received the warranty sheet.
- 3. Move to desired location.
  - A. Note the diminsions of the machine:

idle - 67 L x 35 W x 57 H inches 170.18 L x 88.9 W x 144.78 H cm

in use - 81 L x 68 W x 57 H inches 205.74 L x 172.72 W x 144.78 H cm

Machine Weight (with weight stack) - 650 lbs. (294.83 kg)

- **B.** Determine if you can move your machine through the required doorway(s).
- C. If the machine fits through the doorway(s), move machine to desired location and skip to step 5.
- **D.** If weight stacks need to be installed proceed to step 6.
- **E.** If the machine does not fit through the door-way(s) then see step 4.
- 4. Doorway Instructions.

**NOTE:** If your machine fits through the doorway then skip step 4.
If your machine does not fit through the doorway then perform step 4.

**A.** Carefully remove each (standard) cone-shaped shipping support using a 3/4" socket or wrench.

- **B.** Disconnect weight stack belt (by loosening the two set screws on the belt clamp with a 7/32" Allen wrench). See Figure 1.
- **C.** With an assistant, carefully remove the four BHSCS securing the two halves of the frame. See Figure 2.
- **D.** Carefully move each half through the door-way to the desired location.
- **E.** With an assistant, carefully attach each half together using the four BHSCS removed in step 4C. See Figure 2.
- F. Continue on with step 5B.

## 5. Remove shipping feet and remove the back shrouds.

- **A.** Carefully remove each (standard) cone-shaped shipping support) using a 3/4" socket or wrench).
- **B.** Carefully place rubber feet (supplied with machine) on each foot of the frame.
- **C.** Cut shipping tie securing top weight.
- D. Lift top weight and turn the Increment Weight Adjusting Knob to select all 15 lbs. (three increment weights each side).
- **E.** Remove the three Phillips head screws securing the top (back) shroud and carefully remove the shroud. See Figure 3.
- **F.** Loosen bottom two screws shown in Figure 4. **NOTE:** Do not remove the bottom two screws.
- **G.** Remove the top two screws securing the back shroud. See Figure 5.
- H. Carefully slide rear shroud assembly upward and remove.

#### Install the weight stack.

- **A.** Note how the increment weights are installed.
- **B.** With an assistant holding the increment weights, move the adjusting knob to 0 lbs. and remove all six increment weights (three each side).

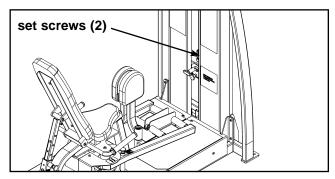


Figure 1

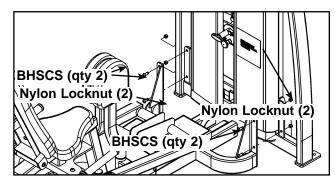


Figure 2

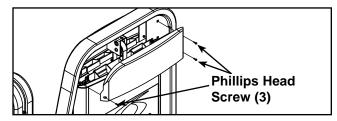


Figure 3

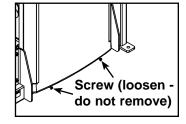


Figure 4

 


Figure 5

- **C.** Using an external snap ring pliers, remove the upper snap ring from one of the guide rods and carefully lower the guide rod. See Figure 6.
- **D.** Remove lower snap ring and wave washer from the guide rod. Repeat steps 6C and 6D to remove both snap rings from other guide rod.
- **E.** If possible, lean guide rods outward, away from machine in order to provide the most room for installing weight plates.


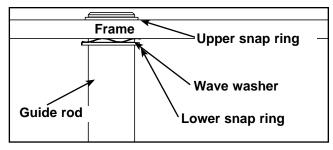


Figure 6

- **F.** Slide top weight up and out of machine and carefully set it aside.
- G. Wipe guide rods clean over entire length. Lubricate with light coating of medium weight automotive engine oil.
- **H.** Carefully install each weight plate one at a time. **NOTE:** When installing weight plates, position plates so wide edges of bushing face upward and narrow edges of bushing face downward. See Figures 7A and 7B.

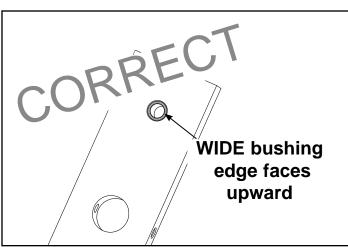

NARROW bushing edge

NOTE: The narrow bushing edge must face downward.

Figure 7A

- I. Slide top weight onto guide rods.
- **J.** Place lower snap ring and wave washer onto guide rod (about 3" from the top end of guide rod).
- **K.** Raise guide rod up through mounting hole and install the upper snap ring.
- **L.** Lower guide rod and secure lower snap ring. Repeat steps 6J 6L for the other guide rod.
- **M.** Reinstall the six increment weights that were removed in step 6B. See Figure 8.
- **N.** Turn the Increment Weight Adjusting Knob to select all 15 lbs.

### 7. Install back shrouds/route weight stack belt

**A.** Carefully place shroud back into position on the two bottom screws. See Figure 9.

Figure 7B

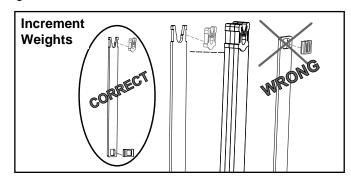


Figure 8

 


Figure 9

- **B.** Install the top two screws securing the back shroud. See Figure 10.
- **C.** Route weight stack belt through the slot in the back shroud (moving from bottom to top).
- **D.** Properly route belt around upper pulley and down to weight stack.
- **E.** Install the three Phillips head screws securing the top (back) shroud. See Figure 11.
- **F.** Carefully lift top weight and verify that the position of the belt clamp (on the top weight) is aligned properly with the top pulley bracket (on the machine). See Figure 12.
- **G.** Slide belt through slot in belt clamp.
- **H.** Verify belt and insert are installed properly, as shown in Figure 13A. **NOTE**: Do not install the insert backwards as shown in Figure 13B.
- I. Pull belt tight and secure belt to clamp with the two set screws. *NOTE:* Torque set screws 300-350 in./lbs. See Figure 14.
- Place weight stack pin in each plate to verify proper installation.
- **K.** Without selecting any resistance, lift top weight up and down (simulating normal operation).
- **L.** Have an assistant verify that the belt is moving smoothly and is routed straight from the top pulley bracket to the top weight belt clamp.

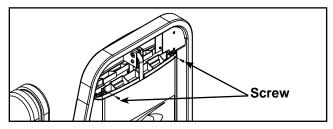


Figure 10

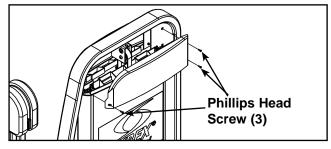


Figure 11

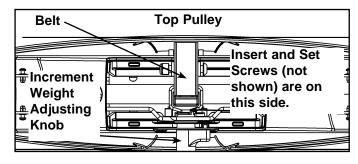


Figure 12 (top view from pulley down to belt clamp)

#### Correct belt routing

#### **Wrong** belt routing

 


Figure 13A

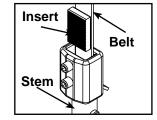


Figure 13B

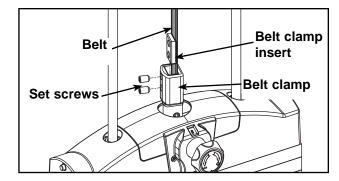


Figure 14

## 8. Install weight plate decals.

**NOTE:** You have the option to use pounds, kilograms or both.

- **A.** Slowly and carefully peel off back side of decal. See Figure 15. **NOTE:** When peeling off back cover, make sure that the decals remain attached to the front sticker.
- **B.** Align holes in decal with appropriate holes in weight stack. **NOTE:** Do not allow the adhesive to touch weight stack at this time.
- C. Insert a guide pin through each hole of the template.

  NOTE: A guide pin can be anything that fits through the weight stack hole, such as a weight stack selector pin.
- **D.** Carefully align decal and rub it onto weight plates.
- **E.** Carefully remove front side, leaving decals adhering to weight plates. See Figure 16.

NOTE: It is important that you perform regular inspection and maintenance activities on your equipment. See the CYBEX Eagle Owner's Manual for inspection and maintenance activities. If you do not have a CYBEX Eagle Owner's Manual or if you have any questions or concerns, call CYBEX Customer Relations at 888-462-9239.

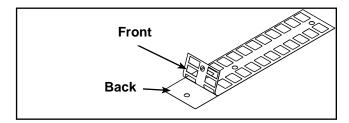


Figure 15

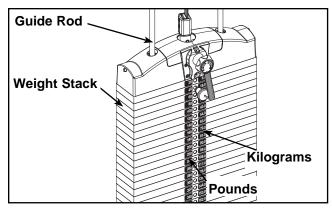


Figure 16

### 9. Verify proper operation.

#### 10. Anchor machine to the floor.

A. Securely anchor machine to the floor using the anchor holes provided in each machine.

**NOTE:** Cybex is not responsible for the actual anchoring of equipment. Consult with a professional contractor.

**NOTE:** Use fasteners having a minimum of 500 lbs. tensile capacity (3/8" grade 2 bolts or better).

**NOTE:** If legs/frame does not contact surface, DO NOT pull down with anchors. Shim any leg or frame not in contact with surface using flat washers.

Cybex Eagle 11181 Hip Abduction/Adduction Owner's Manual	
This page intentionally left blank.	

# **Chapter 5 - Maintenance**

All preventive maintenance activities must be performed on a regular basis. Performing routine preventive maintenance actions can aid in providing safe, trouble-free operation of all Cybex Strength Systems equipment.

**NOTE:** Cybex is not responsible for performing regular inspection and maintenance actions for your machines. Instruct all personnel in equipment inspection and maintenance actions and also in accident reporting/recording. Cybex phone representatives are available to answer any questions or concerns that you may have.



Use only Cybex replacement parts when servicing. Failure to do so could result in personal injury.

**NOTE:** All inspections and repairs must be performed by trained service personnel only.

Cybex will void warranty if non-Cybex replacement parts are used.

## **Daily Procedures**

1. **Upholstery** - Wipe down all upholstery as per the recommendations listed below for light soiling and more difficult stains.

**Light Soiling** 

- A solution of 10% household liquid dish soap with warm water applied with a soft damp cloth.
- If necessary, a solution of liquid cleanser and water applied with a soft bristle brush. Wipe away the residue with a water dampened cloth.

#### **More Difficult Stains**

- Dampen a soft white cloth with a solution of 10% household bleach (sodium hypochlorite), 90% water. Rub gently. Rinse with a water dampened cloth to remove bleach concentration.
- The same procedure can be used with full strength household bleach, if necessary.
- Allow bleach to puddle on the affected area or apply with a soaked cloth for approximately 30 minutes. Rinse with a water dampened cloth to remove any remaining bleach concentration.

#### Alternative Method for Difficult Stains

• Dampen a soft white cloth with rubbing alcohol and rub gently. Rinse with a water dampened cloth to remove any remaining rubbing alcohol concentration.

**NOTE:** To restore luster, a light coat of spray furniture wax can be used. Apply for 30 seconds and follow with a light buffing using a clean white cloth.

#### Please Review Carefully

When using strong cleaning agents such as rubbing alcohol or bleach, it is advisable to first test in an inconspicuous area. Other cleaning agents may contain harsh or unknown solvents and are subject to formula changes by the product manufacturer without notice. Should you desire to use other cleaning agents, carefully try them in an inconspicuous area to determine potential damage to the material. Never use harsh solvents or cleaners which are intended for industrial applications. To clean stained or soiled areas, a soft white cloth is recommended. Avoid use of paper towels.

Cleaning products may be harmful/irritating to your skin, eyes, etc. Use protective gloves and eye protection. Do not inhale or swallow any cleaning product. Protect surrounding area/clothing from exposure. Use in a well ventilated area. Follow all product manufacturer's warnings. CYBEX and its vendors cannot be held responsible for damage or injuries resulting from the use or misuse of cleaning products.

- 2. Frames Wipe down all frames using a mild solution of warm water and car wash soap. Be sure to dry thoroughly. AVOID acid or chlorine based cleaners and also cleaners containing abrasives as these could scratch or damage the equipment.
- **3.** Chrome Clean chrome tubes, first using chrome polish and then using a car wax seal. Neutral cleaners with a pH between 5.5 and 8.5 are recommended. Be sure to dry thoroughly. AVOID acid or chlorine based cleaners and also cleaners containing abrasives as these could scratch or damage the equipment.

### 4. Guidelines for cleaning front panel:

- Use clean soft cloths or sponges for application of cleaners and again for washing and rinsing.
- Follow up the application with warm water rinse.
- Don't use abrasives or high alkaline cleaners.
- Don't leave cleaners on for long periods, wash immediately.
- Don't apply cleaners in direct sunlight or at elevated temperatures.
- Don't use scrapers, squeegees or razors.
- Don't clean with gasoline.

## **Compatible Cleaners and Detergents:**

- Formula 409
- Top Job
- Joy
- Palmolive
- Windex with Ammonia D

### To Minimize Fine or Hairline Scratches:

Mild automotive polish applied and removed with a soft, clean cloth will help fill scratches.

### **Suggested Polishes:**

- Johnson Paste Wax
- Mirror Glaze #10 Plastic Polish (by Mirror Bright Polish Co.)
- Novus Plastics Polish #1, #2 (by Novus Inc.)

## Weekly Procedures

- 1. Check all nuts and bolts for looseness. Tighten as required.
- 2. Inspect all belts (entire length) for any non-uniformity and wear.

Immediately replace belt if any of the following conditions are present:

	3D View	3D or Side View
• Peeling of the belt's skin.		
• Wave in the belt.		
Belt is necked down (narrow section).	Replace belt if any section is over 1/32" (.03") narrower than rest of the belt.	Examine edge of belt (both sides). Replace belt if any section is narrower than the rest.
• Cracks or splits.		\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
• One or more strands of kevlar hanging out. NOTE: Also replace belt if there is a significant amount of frayed kevlar.		

**3.** Some machines use cables in addition to belts. Inspect all cables for wear or damage and proper tension. When inspecting cables, run your fingers on the cable, paying particular attention to bends in the cable and attachment points.

Replace all worn cables immediately. The following conditions may indicate a worn cable:

A tear or crack in the cable sheath that exposes the cable. See Figure 1.

 


Figure 1

• A kink in the cable. See Figure 2.

 


Figure 2

• A curled sheath. See Figure 3.

 


Figure 3

• "Necking", a stretched cable sheath. See Figure 4.

 


Figure 4

**4.** Inspect bars and handles for wear, paying particular attention to tab area connecting points.

Replace all worn handles immediately.

5. Inspect snap links for proper latching (indicates wear).

Replace all worn snap links immediately.

**6.** Inspect for loose or worn grips.

Replace all loose or worn grips immediately.

7. Inspect all labeling for readability. This includes instructional placards, warning and caution decals.

Replace all worn labeling immediately.

8. Inspect all weight stacks for proper alignment and operation.

Correct all improper alignment and operation issues immediately.

**9.** Wipe Weight Stack Guide Rods clean over entire length. Lubricate with a light coat of medium weight automotive engine oil.

## Yearly Procedures

1. Replace all belts and cables at least annually.

### **Environment**

**Static Electricity** - Depending upon where you live, you may experience dry air, causing a common experience of static electricity. This may be especially true in the winter time. You may notice a static build-up just by walking across a carpet and then touching a metal object. The same can hold true while working out on your unit. You may experience a shock due to the build-up of static electricity on your body and the discharge path of the unit. If you experience this type of situation, you may want to increase the humidity to a comfortable level through the use of a humidifier.

**Humidity -** The unit is designed to function normally in an environment with a relative humidity range of 30% to 75%.

**NOTE:** Do not install or use the unit in an area of high humidity, such as in the vicinity of a steam room, sauna, indoor pool or outdoors. Exposure to extensive water vapor, chlorine and/or bromine could adversely affect the electronics as well as other parts of the machine.

**Temperature -** The unit is designed to function normally in an environment with an ambient temperature range of 50°F (10°C) to 104°F (40°C) degrees.

## Storage

Humidity - The unit can be shipped and stored in an environment with a relative humidity range of 10% to 90%.

**NOTE:** Do not store the unit in an area of high humidity, such as in the vicinity of a steam room, sauna, indoor pool or outdoors. Exposure to extensive water vapor, chlorine and/or bromine could adversely affect the electronics as well as other parts of the machine.

Temperature - The unit can be shipped and stored in an environment with an ambient temperature range of 32° F (0° C) and 140° F (60° C) degrees.

