Octane Fitness LX8000 LateralX Elliptical (Remanufactured)



"Only connect (2) moving handlebars and (2) stabilzers to the frame. The rest of the machine is complete"




"Only connect (2) moving handlebars and (2) stabilzers to the frame. The rest of the machine is complete"

LATERAL MOVE IN A NEW DIRECTION

LX8000 Assembly Instructions

Hardware

□ B-3

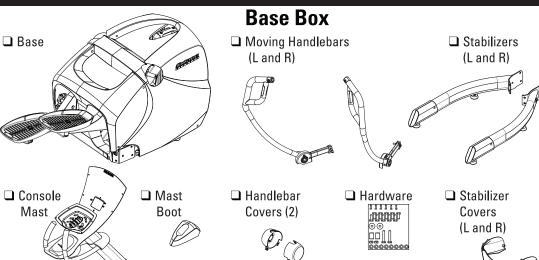










Qty 4):

Ordanna

8

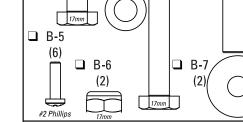



□ B-2


□ B-1


(10)


■ Information **Packet**





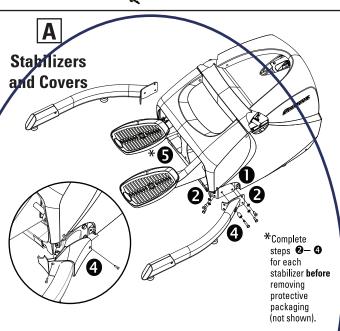

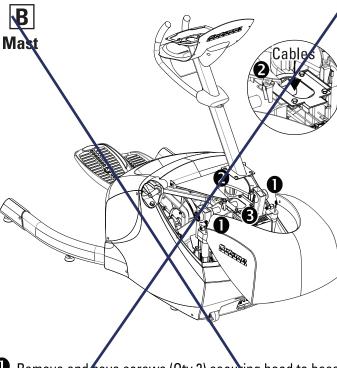

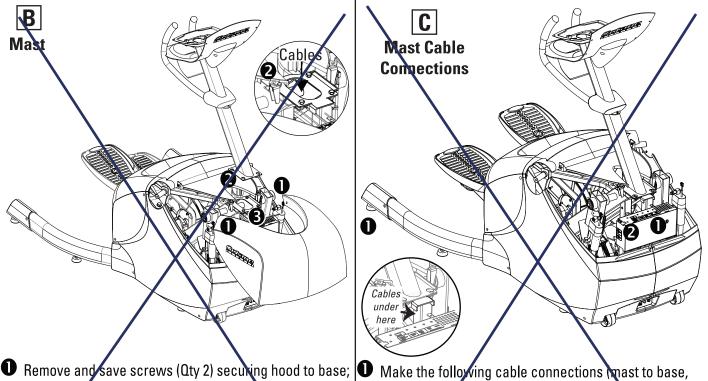

Remove and discard plastic fasteners securing packaging to each side of base; fold down cardboard flaps. Attach stabilizer with bolt B-1 and washer B-2 (Qty/4).

remove hood and set aside.

Insert bolt B-3 through sleeve B-4 and through stabilizer into base. Tighten all 5 bolts to 35 ft-lb.

2 Slide mast over bolts on base. Route cables through hole in base (see inset).

Attach stabilizer cover with B-5 (Oty 2); tighten. Repear 2 through 4 for second stabilizer.

S Remove packaging block(s) and carefully

Tighten bolts (Qty 4) to 20 ft-lb.

Make sure the cables are tucked below the metal plate Connectors with red

C-SAFE

and black wires). C-SAFE

Master


Control

Moving Arm Cable

F

evel &

User Set-up

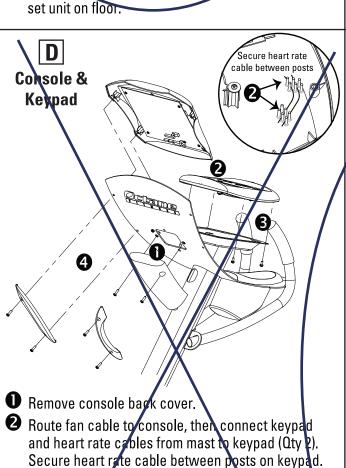

Attach keypad to mast with C-2 (Qtv 1)

Attach console and arcs to mast with 6-1 (Oty 4).

(white, 14-pin) (metal; green wire)


connect (Qty 7). Attach console back cover.


Match cable connectors to sockets on console back;

Software Upda

Heart Rate

(white, 8-pin)

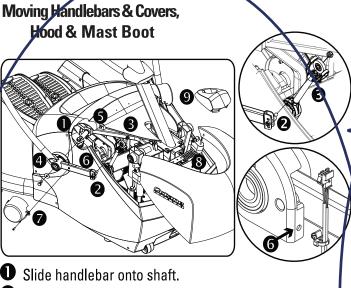

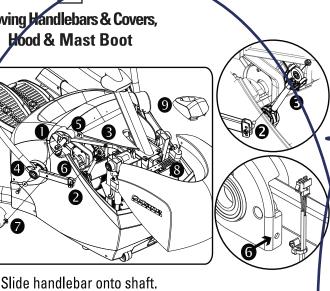

② Optional—adjust handlebar reach +/- 2.4" (61mm): Remove bolt, reposition shaft and spacer (top hole is longest reach), and re-install.

Connect arm link to bottom of handlebar with B-6 (Qty tighten to 30 ft-lb.

4 Secure arm in shaft with B-1 (Qty 1) and B-7 (Qty 1; tighten to 30 ft-lb.

• Remove tie securing handlebar cables to frame; connect moving handlebar cables (Qty 2).

6 Press plastic clip on handlebar cables into hole on moving handlebar as indicated by label.

Repeat 🛈 through 🌀 for second handlebar.

Attach handlebar covers with B-5 (Qty 1 each)

Tock cables under metal bracket of mast; position hood, press hood into place and secure with screws (Qty 2).

Wrap mast boot around mast: tuck into tray.

Adjust and lock levelers (2 in front, 2 on each stabilizer); make sure all 6 touch the floor and each nut is tight.

Complete User Set-Up: Press and hold Level See Operations Manual for detailed instructions.

Optional: Connect CSAFE and/or video.

USA & Canada 888-OCTANE4

(white, 6-pin)