


# Precor AMT Open Stride Assembly Manual

for AMT 835, 865, & 885 w/p30, p62, p80, & p82 Consoles




**"Highlighted Arms ONLY removed to fit through a 29" Door"**

Step 1

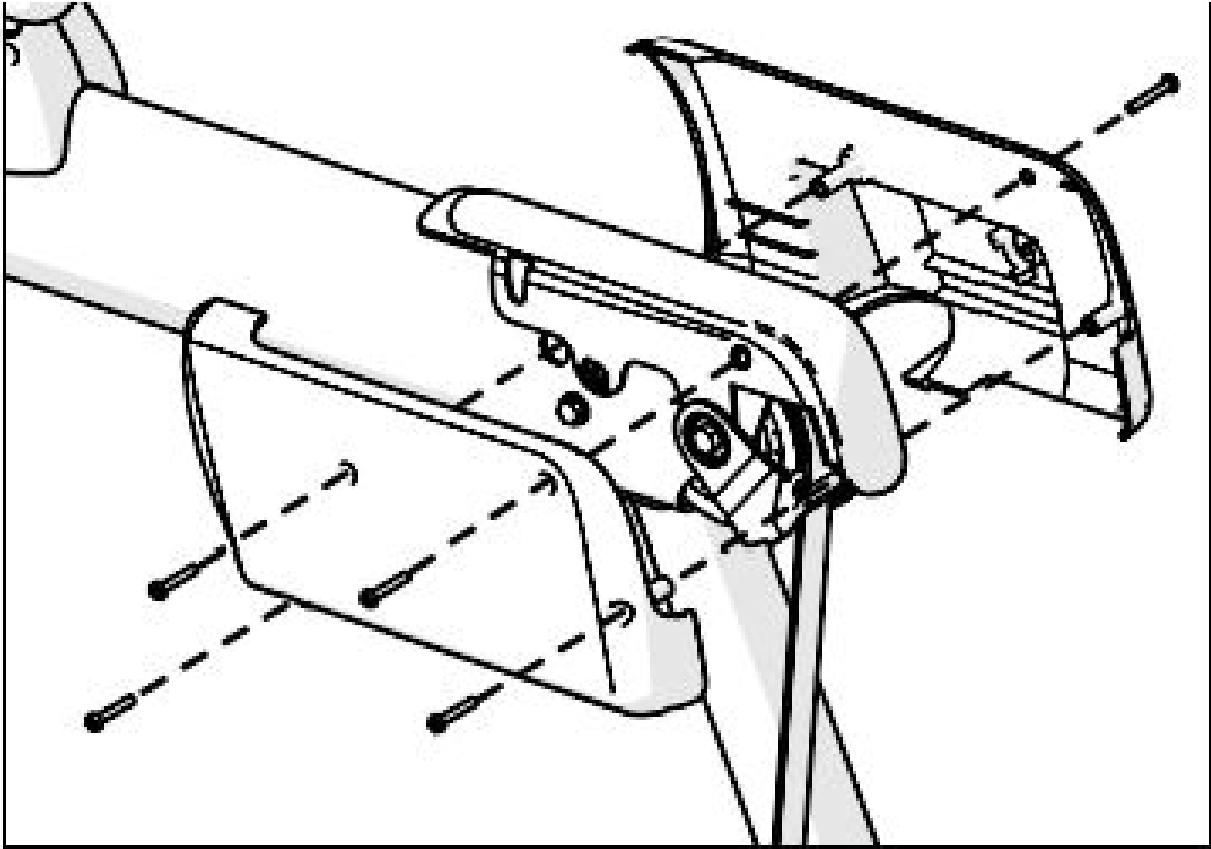

**Figure 8: Side arm cover attachment**

Step 2

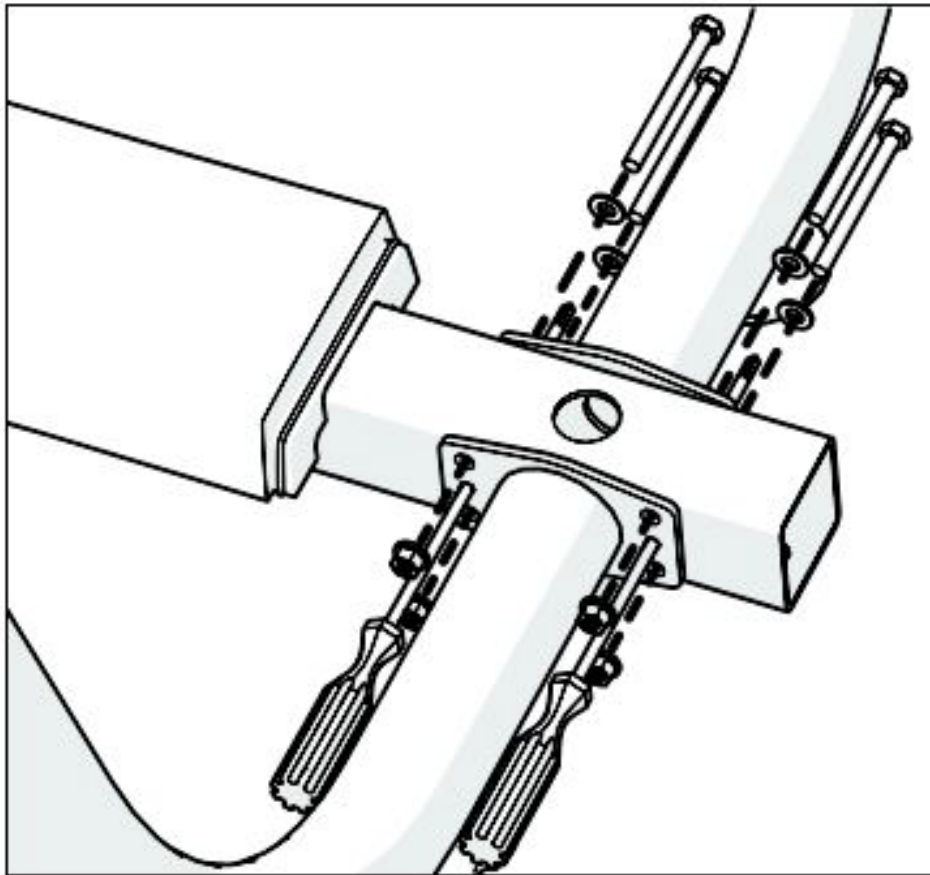

### Step 3

