

Cybex VR3® Lat Pull Owner's and Service Manual

Strength Systems
Part Number 12130-999-4 K

www.cybexinternational.com





Cybex VR3® Lat Pull Owner's and Service Manual

Strength Systems
Part Number 12130-999-4 K

 $\mbox{Cybex}^{\mbox{\/en}}$  and the Cybex logo are registered trademarks of Cybex International, Inc.  $\mbox{VR3}^{\mbox{\/en}}$  and its mark are registered trademarks of Cybex International, Inc.

**DISCLAIMER:** Cybex International, Inc., makes no representations or warranties regarding the contents of this manual. We reserve the right to revise this document at any time or to make changes to the product described within it without notice or obligation to notify any person of such revisions or changes.

© Copyright 2010, Cybex International, Inc. All rights reserved.

Printed in the United States of America.

10 Trotter Drive Medway, MA 02053 • 508-533-4300 • FAX 508-533-5183

www.cybexinternational.com • techhelp@cybexintl.com • 12130-999-4 K • March 2010



# **Table of Contents**

1	Safety Safety Safety Guidlines and Practices Warning/Caution Decals Regular Maintenance Activities Using Proper Form	1-2 1-3 1-6
2	Exercises Intended Use	
3	Customer Service Contacting Service Ordering parts	3-1 3-2
4	Assembly	4-1
5	Maintenance Daily Procedures	5-4 5-6 5-7
6	Service Parts Lists	



# 1 - Safety

# Safety

Read the Owner's Manual carefully before assembling, servicing or using the equipment.

It is the responsibility of the facility owner and/or owner of the equipment to instruct users on proper operation of the equipment and review all labels.



WARNING: Serious injury could occur if these safety precautions are not observed:

#### **User Safety Precautions**

- Obtain a medical exam prior to beginning an exercise program.
- Keep body and clothing free from and clear of all moving parts.
- Inspect machine prior to use. DO NOT use if it appears damaged or inoperable.
- DO NOT attempt to fix a broken or jammed machine. Notify floor staff.
- Use the machine only for the intended use. DO NOT modify the machine.
- Be sure that the weight pin is completely inserted. Use only the pin provided by the manufacturer.
   If unsure seek assistance.
- Never pin the weights in an elevated position. **DO NOT** use the machine if found in this condition. See assistance from floor staff.
- Children must not be allowed near these machines. Teenagers must be supervised.
- DO NOT use if guards are missing or damaged.
- DO NOT use dumbbells or other incremental weights, except those provided by the manufacturer.
- Inspect all cables and belts and connections prior to use. DO NOT use if any components are worn, frayed or damaged.
- DO NOT remove any labeling from equipment. Replace any damaged labels.
- Stop exercising if you feel faint, dizzy or experience pain at any time while exercising and consult your physician.

#### **Facility Safety Precautions**

- Read the Owner's Manual carefully before assembling, servicing or using the equipment.
- Securely anchor each machine to the floor using the anchor holes provided in each machine.
  - **NOTE:** Cybex is not responsible for the actual anchoring of equipment. Consult with a professional contractor.
  - **NOTE:** Use fasteners having a minimum of 500 lbs. tensile capacity (3/8" grade 2 bolts or better).
  - **NOTE:** If legs/frame does not contact surface, DO NOT pull down with anchors. Shim any leg or frame not in contact with surface using flat washers.

- Make sure that each machine is set up and operated on a solid level surface. Do not install
  equipment on an uneven surface.
- Make sure that all users are properly trained on how to use the equipment.
- Make sure there is enough room for safe access and operation of the equipment.
- Perform regular maintenance checks on the equipment. Also pay close attention to all areas most susceptible to wear, including (but not limited to) cables, pulleys, belts and grips.
- Immediately replace worn or damaged components. If unable to immediately replace worn or damaged components then remove from service until the repair is made.
- Use only Cybex supplied components to maintain/repair the equipment.
- Keep a repair log of all maintenance activities.
- Inspect all cables and belts and connections prior to use. DO NOT use if any components are worn, frayed or damaged.

**NOTE:** It is the sole responsibility of the user/owner or facility operator to ensure that regular maintenance is performed.

# Safety Guidelines And Practices

Cybex recommends that all fitness equipment be used in a supervised area. It is recommended that the equipment be located in an access controlled area. Control is the responsibility of the owner. The extent of control is at the discretion of the owner.

It is the responsibility of the purchaser/user of Cybex products to read and understand the owner's manual, and warning labels; as well as instruct all individuals, whether end users or supervising personnel, on proper usage of the equipment.

#### PROPER USAGE:

Use machine only as described in the manual. Failing to follow proper instructions may result in injury.

**Do Not Lean Against or Pull** On the framework, weight stack, or any component, whether machine is at rest or in use. Inappropriate or improper use may result in injury to users or third parties (bystanders).

Do not use machine if it is not located on a solid level surface or is improperly installed.

Provide an adequate safety perimeter between the machine, walls and other equipment to ensure that the facility has the proper clearance for usage and training.

#### **SECURING EQUIPMENT:**

The machine has holes in the feet, which allow for ease in anchoring to the floor. Cybex strongly recommends that, to eliminate rocking, tipping or falling over due to incorrect usage and misuse, equipment be secured to a solid. level surface.

- **1.** The solid, level surface should not deviate more than 1/8" over a 10' distance or as defined and required by local building and architectural codes.
- 2. Anchoring of equipment must be completed by a qualified licensed contractor.

Safety Page 1-2

- **3.** Anchoring holes are provided on the feet of the frame. All anchoring locations must be used when anchoring the equipment to the floor.
- **4.** Due to the wide variation of flooring on which machines may be anchored or installed, verify anchoring method and anchoring fasteners with a qualified and licensed contractor.
- 5. A minimum pull out force of 220 lbs/100 kgs is required for each anchor position...
- 6. Do not use machine until it is properly anchored.

#### **MAINTENANCE:**

Preventative maintenance allows proper equipment operation and reduces the risk of injury. Perform the maintenance requirements as specified in the manual.

#### STANDARD COMPLIANCE:

Cybex products meet or exceed applicable ASTM and EN Standards.



# Warning/Caution Decals

Warning decals indicate a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

Caution decals indicate a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury.

The warning and caution decals are shown on the following page. The diagrams following the decals show where each decal is located.



# SERIOUS INJURY COULD OCCUR IF THESE PRECAUTIONS ARE NOT OBSERVED

- 1. Obtain a medical exam prior to beginning an exercise program.
- 2. Read and understand warning labels and user manual prior to exercising. Obtain instruction prior to use.
- 3. Keep body and clothing free from and clear of all moving parts.
- 4. Inspect machine prior to use. DO NOT use if it appears damaged or inoperable.
- 5. DO NOT attempt to fix a broken or jammed machine. Notify floor staff.
- 6. Use the machine only for the intended use. DO NOT modify the machine.
- 7. Be sure that the weight pin is completely inserted. Use only the pin provided by the manufacturer. If unsure seek assistance.
- 8. Never pin the weights in an elevated position. DO NOT use the machine if found in this condition. Seek assistance from floor staff.
- 9. Children must not be allowed near this machine. Teenagers must be supervised.
- 10. DO NOT use if guards are missing or damaged.
- 11. DO NOT use dumbbells or other incremental weights, except those provided by the manufacturer.
- 12. Inspect all cables and belts and connections prior to use, DO NOT use if any components are worn, frayed, or damaged.
- 13. DO NOT REMOVE THIS LABEL. REPLACE IF DAMAGED.

4605-381-4 A

# **A** CAUTION

Personal injury may occur.

Keep away from moving parts to avoid injury.

4000Y316-4


# **AWARNING**

Arm will drop when knob is pulled.
Support arm while adjusting arm position.

Be sure detent pin is fully engaged before use. Return arm to storage position when not in use.

Failure to do so could result in personal injury.

8500-311-4 A

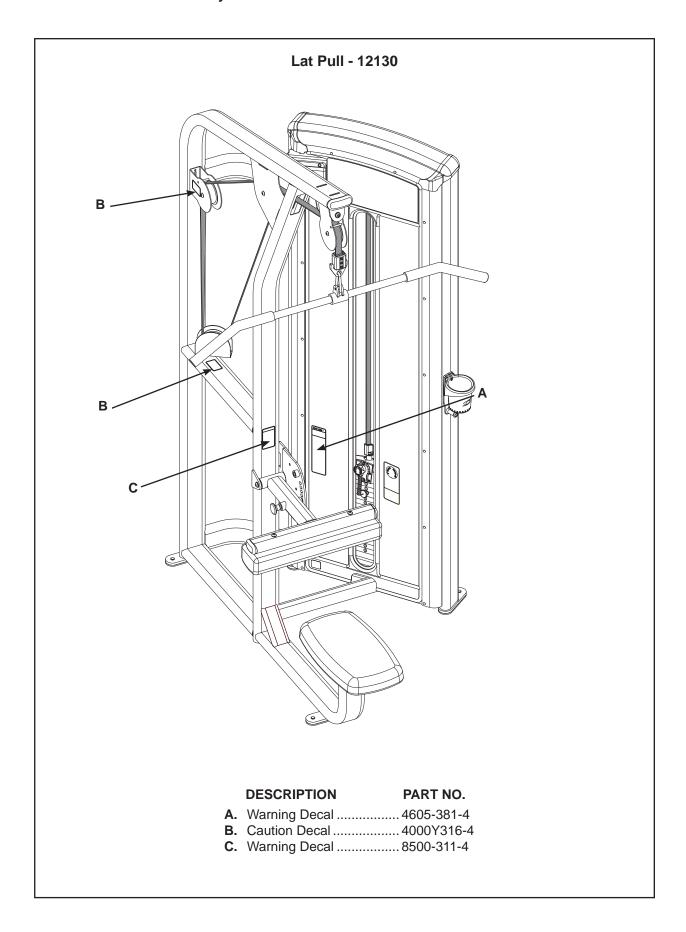

# Regular Maintenance Activities

Preventative maintenance activities must be performed to maintain normal operation of your equipment. Keeping a log sheet of all maintenance actions will assist you in staying current with all preventative maintenance activities. The preventative maintenance actions are described in detail in Chapter 5. Briefly, they include:

#### **Daily**

1. Clean upholstery.

# Weekly

- 1. Inspect all nuts and bolts for looseness. Tighten as required.
- 2. Inspect all cables for damage or wear (see Chapter 5). Immediately discontinue use if a cable is worn or damaged.
- **3.** Check for worn handles, worn snap links, and worn warning labeling. Replace all worn parts immediately.
- 4. Inspect for loose or worn grips. Replace all loose or worn grips immediately.
- **5.** Inspect weight stacks for proper alignment and operation. Correct all improper alignmentand operation issues immediately.
- 6. Lubricate guide rods using automotive engine oil only.

#### Yearly

1. Replace all cables at least annually.

# **Using Proper Form**

Before working out, read and understand the exercises located on the placard and in Chapter 2.


# 2 - Exercise


# Intended Use

The intended use of this equipment is to aid or improve general physical fitness and exercise. For Commercial use.

## Instructions

Read and understand all instructions and warnings prior to using this machine. See Chapter 1, Safety in the VR3 Owner's Manual or consult with floor staff.

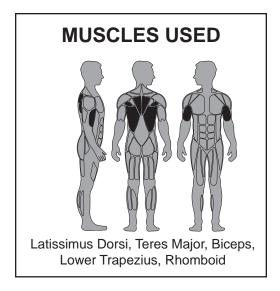

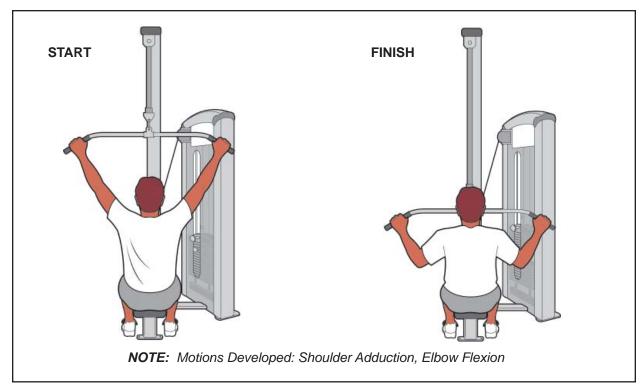

**NOTE:** Do not turn knob when weight stack is elevated.

**NOTE:** All adjustment points on the machine have yellow handles or knobs.

NOTE: See next page for "Set Up" and "Movement".

# Set Up

- 1. Adjust thigh pad for stabilization during exercise.
- 2. Grasp bar and sit with thighs under pads.

#### Movement

**1.** Pull bar down until elbows are by your sides and hands are approximately level with shoulders.

# 3 - Customer Service

# **Contacting Service**

Hours of phone service are Monday through Friday from 8:30 to 6:00 p.m. Eastern Standard Time.

For Cybex customers living in the USA, contact Cybex Customer Service at 888-462-9239.

For Cybex customers living outside the USA, contact Cybex Customer Service at **508-533-4300** or fax **508-533-5183**.

Order parts and find information on the web at www.eCybex.com or by e-mail at techhelp@cybexintl.com.

# **Ordering Parts**

Fax orders to **508-533-5183**. To speak with a customer service representative, call **888-462-9239** (for customers living within the USA) or **508-533-4300** (for customers outside the USA). You may also contact us through e-mail at techhelp@cybexintl.com

Having the following information ready when calling will assist our Cybex representatives in serving you.

- Unit Serial Number
- Product Name

The unit serial number and product name can be found on the serial number decal. See Chapter 6 for exact location of serial number decal.

- Part Description
- Part Number

Part descriptions and part numbers are located in Chapter 6 of this manual.

- Shipping Address
- Contact Name

In addition to your shipping address and contact name, your account number is helpful but not required.

# **Return Material Authorization (RMA)**

The Return Material Authorization (RMA) system outlines the procedures to follow when returning material for placement, repair or credit. The system assures that returned materials are properly handled and analyzed. Follow the following procedures carefully.

Contact your authorized Cybex dealer on all warranty-related matters. Your local Cybex dealer will request a RMA from Cybex, if applicable. Under no circumstances will defective parts or equipment be accepted by Cybex without proper RMA and an Automated Return Service (ARS) label.

- 1. Call the Customer Service Hot Line listed above for the return of any item that is defective.
- 2. Provide the technician with a detailed description of the problem you are having or the defect in the item you wish to return.
- 3. Provide the model and serial number of your Cybex equipment.
- 4. At Cybex's discretion, the technician may request that you return the problem part(s) to Cybex for evaluation and repair or replacement. The technician will assign you a RMA number and will send you an ARS label. The ARS label and the RMA numbers must be clearly displayed on the outside of the package that contains the item(s) to be returned. Include the description of the problem, the serial number of the equipment and the name and address of the owner in the package along with the part(s).
- 5. Forward the package through UPS to Cybex.

**Attn: Customer Service Department** 

Cybex International, Inc.

1975 24th Ave SW

Owatonna, MN 55060

**NOTE:** Merchandise returned without an RMA number on the outside of the package or shipments sent COD will not be accepted by the Cybex receiving department.

## **Damaged Parts**

Materials damaged in shipment should not be returned for credit. Shipping damages are the responsibility of the carrier (UPS, Federal Express, trucking companies, etc.)

**Apparent Damage -** Upon receipt of your shipment, check all items carefully. Any damage seen with a visual check must be noted on the freight bill and signed by the carrier's agent. Failure to do so will result in the carriers refusal to honor your damage claim. The carrier will provide you with the required forms for filing such claims.

**Concealed Damage -** Damage not seen with a visual check upon receipt of a shipment but notices later must be reported to the carrier as soon as possible. Upon discovery of the damage, a written or phone request to the carrier asking them to perform an inspection of the materials must be made within ten days of the delivery date. Keep all shipping containers and packing materials as they will be needed in the inspection process. The carrier will provide you with an inspection report and the necessary forms for filing a concealed damage claim. Concealed damage claim is the carrier's responsibility.

This page intentionally left blank

# 4 - Assembly

#### **TOOLS REQUIRED**

- 7/32" Allen wrench
- 1/8" Allen wrench
- Medium weight automotive engine oil
- Torque wrench
- 3/4" Wrench

**NOTE:** Two people will be required for this procedure.

**NOTE:** It is the responsibility of the facility owner/owner of the equipment to ensure that there is appropriate clearance around each machine to allow for safe use and passage.

**NOTE:** Refer to chapter 6 for reference diagrams.


- 1. Read and understand all instructions thoroughly before starting any of the procedures listed on this instruction sheet.
- 2. Verify you have received the appropriate configuration.
  - A. Verify that you received the correct color machine that you ordered.
  - B. Verify you received the proper weight stack.
  - **C.** Verify you received the appropriate owner's manual.
  - **D.** Verify you received the warranty sheet.
  - **E.** Verify you received the weight stack decals.
- 3. Move to desired location.
- 4. Remove shipping feet.



WARNING: Use extreme caution when removing shipping cones and installing feet. Failure to do so could result in injury.

- **A.** With an assistant, carefully remove each (standard) cone-shaped shipping support using a 3/4" socket or wrench.
- B. Cut shipping tie securing top weight.
- **C.** Carefully place rubber feet (supplied with machine) on each foot of the frame.
- 5. Installing the weight stack.
  - A. If weight stack is already installed, proceed to step 9.
  - **B.** Using a 1/8" Allen wrench, remove the two Button Head Socket Cap Screws (BHSCS) securing the bottom bracket to the frame. *NOTE:* Do not remove middle BHSCS securing shroud to bottom bracket.
  - **C.** Remove the remaining BHSCS securing the back shroud to the frame. **NOTE**: After final BHSCS is removed shroud will slide down to the floor with bottom support bracket attached.
  - **D.** Carefully slide shroud out of machine.

- **E.** Slide spring loaded top guide rod cap down guide rod until guide rod cap is clear of frame. **NOTE:** Top guide rod cap is spring loaded.
- **F.** Slowly release grasp of guide rod cap. **NOTE:** Guide rod cap contains a compression spring that will fly if grasp is not released slowly.
- **G.** Remove guide rod cap and spring and set aside.
- H. Repeat steps 5F-5H for other rod guide.
- I. Carefully lean guide rods slightly outward, away from machine to clear pulley. **NOTE:** Excessive pressure on guide rods may damage lower guide rod caps.
- **J.** Slide top weight up and out of machine and carefully set it aside.
- **K.** Wipe guide rods clean over entire length. Lubricate with light coating of medium weight automotive engine oil.
- L. Have an assistant hold the guide rods vertical.
- **M.** Carefully align weight plate over guide rods and slowly lower weight plate. **NOTE:** When installing weight plates, position plates so wide edges of bushing face upward and narrow edges of bushing face downward. See Figures 1A and 1B.
- N. Repeat step 5M-5N to install each weight plate.

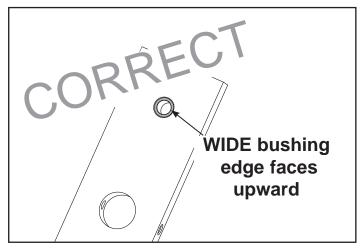

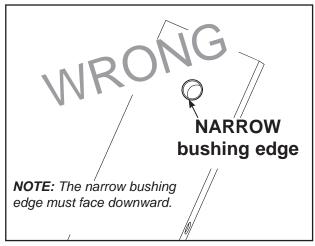


Figure 1A Figure 1B

- O. Slide top weight over guide rods.
- **P.** Place springs and guide rod caps on guide rods (removed from step 5G).
- **Q.** Compress guide rod caps and ailgn guide rod caps with weight frame holes and secure in place. **NOTE:** Guide rod caps must snap or lock into weight frame holes.

### 6. Belt Routing.

- **A.** Verify belt is routed through top of pulley bracket and then route end of belt down to the top weight.
- **B.** Carefully lift top weight and verify that the position of the belt clamp (on the top weight) is aligned properly with the top pulley bracket.
- C. Slide belt through slot in belt clamp.
- **D.** Verify belt and insert are installed properly, as shown in Figure 2A. **NOTE:** Do not install the insert backwards as shown in Figure 2B.
- **E.** Pull belt tight and secure belt to clamp with the two set screws. **NOTE:** Torque set screws 300-350 in./lbs.
- **F.** Place weight stack pin in each plate to verify proper installation.
- **G.** Without selecting any resistance, lift top weight up and down (simulating normal operation).
- **H.** Have an assistant verify that the belt is moving smoothly and is routed straight from the top pulley bracket to the top weight belt clamp.
- **I.** Turn the Increment Weight Adjusting Knob to select 0 lbs or 0 kg.

#### 7. Install back shrouds.

- A. Carefully place shroud into position.
- B. Starting at the bottom replace the two BHSCS (removed in step 5D) to secure bottom support bracket to the shroud. Install but do not tighten remaining BHSCS securing shroud.
- C. Tighten all BHSCS.


Guide Rod


Weight Stack


# Figure 4

# 8. Install weight plate decals.

- **A.** Slowly and carefully peel off back side of decal. **NOTE:** When peeling off back cover, make sure that the decals remain attached to the front sticker. Figure 3.
- **B.** Insert a guide pin through each hole of the template. **NOTE:** A guide pin can be anything that fits through the weight stack hole, such as a weight stack selector pin.
- C. Carefully align decal and rub it onto weight plates.
- D. Carefully remove front side, leaving decals adhering to weight plates. See Figure 4.



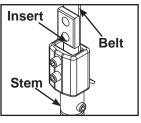

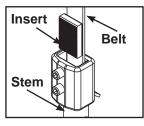

Kilograms

Wrong belt routing

Figure 2A

Figure 2B

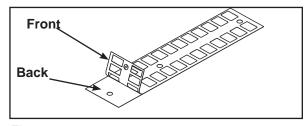


Figure 3

**Pounds** 

**NOTE:** It is important that you perform regular inspection and maintenance activities on your equipment. See the CYBEX Owner's Manual for inspection and maintenance activities. If you do not have a CYBEX Owner's Manual or if you have any questions or concerns, call CYBEX Customer Relations at 888-462-9239.

## 9. Verify proper operation

## 10. Securely anchor machine to the floor.

**A.** Securely anchor machine to the floor using the anchor holes provided in each machine.

**NOTE:** Cybex is not responsible for the actual anchoring of equipment. Consult with a professional contractor.

NOTE: Use fasteners having a minimum of 500 lbs. tensile capacity (3/8" grade 2 bolts or better).

**NOTE:** If legs/frame does not contact surface, DO NOT pull down with anchors. Shim any leg or frame not in contact with surface using flat washers.

# 5 - Maintenance

All preventive maintenance activities must be performed on a regular basis. Performing routine preventive maintenance actions can aid in providing safe, trouble-free operation of all Cybex Strength Systems equipment.

**NOTE:** Cybex is not responsible for performing regular inspection and maintenance actions for your machines. Instruct all personnel in equipment inspection and maintenance actions and also in accident reporting/recording. Cybex phone representatives are available to answer any questions or concerns that you may have.



Use only Cybex replacement parts when servicing. Failure to do so could result in personal injury.

**NOTE:** All inspections and repairs must be performed by trained service personnel only.

Cybex will void warranty if non-Cybex replacement parts are used.

## **Daily Procedures**

**1. Upholstery -** Wipe down all upholstery as per the recommendations listed below for light soiling and more difficult stains.

#### Light Soiling

- A solution of 10% household liquid soap with warm water applied with a soft damp cloth.
- If necessary, a solution of liquid cleanser and water applied with a soft bristle brush. Wipe away the residue with a water dampened cloth.

#### More Difficult Stains

- Dampen a soft white cloth with a solution of 10% household bleach (sodium hypochlorite),
   90% water. Rub gently. Rinse with a water dampened cloth to remove bleach concentration.
- The same procedure can be used with full strength household bleach, if necessary.
- Allow bleach to puddle on the affected area or apply with a soaked cloth for approximately 30 minutes. Rinse with a water dampened cloth to remove any remaining bleach concentration.

#### Alternative Method for Difficult Stains

 Dampen a soft white cloth with rubbing alcohol and rub gently. Rinse with a water dampened cloth to remove any remaining rubbing alcohol concentration.

**NOTE:** To restore luster, a light coat of spray furniture wax can be used. Apply for 30 seconds and follow with a light buffing using a clean white cloth.

#### Please Review Carefully

When using strong cleaning agents such as rubbing alcohol or bleach, it is advisable to first test in an inconspicuous area. Other cleaning agents may contain harsh or unknown solvents and are subject to formula changes by the product manufacturer without notice. Should you desire to use other cleaning agents, carefully try them in an inconspicuous area to determine potential damage to the material. Never use harsh solvents or cleaners which are intended for industrial applications. To clean stained or soiled areas, a soft white cloth is recommended. Avoid use of paper towels.

Cleaning products may be harmful/irritating to your skin, eyes, etc. Use protective gloves and eye protection. Do not inhale or swallow any cleaning product. Protect surrounding area/clothing from exposure. Use in well ventilated area. Follow all product manufacturer's warnings. CYBEX and its vendors cannot be held responsible for damage or injuries resulting from the use or misuse of cleaning products.

- **2. Frames -** Wipe down all frames using a mild solution of warm water and car wash soap. Be sure to dry thoroughly. **AVOID** acid or chlorine based cleaners and also cleaners containing abrasives as these could scratch or damage the equipment.
- **3. Chrome -** Clean chrome tubes, first using chrome polish and then using a car wax seal. Neutral cleaners with a pH between 5.5 and 8.5 are recommended. Be sure to dry thoroughly. **AVOID** acid or chlorine based cleaners and also cleaners containing abrasives as these could scratch or damage the equipment.

#### 4. Guidelines for cleaning front panel:

- Use clean soft cloths or sponges for application of cleaners and again for washing and rinsing.
- Follow up the application with warm water rinse.
- Don't use abrasives or high alkaline cleaners.
- Don't leave cleaners on for long periods, wash immediately.

- Don't apply cleaners in direct sunlight or at elevated temperatures.
- Don't use scrapers, squeegees or razors.
- Don't clean with gasoline.

## **Compatible Cleaners and Detergents:**

- Formula 409
- Top Job
- Joy
- Palmolive
- Windex with Ammonia D

#### To Minimize Fine or Hairline Scratches:

Mild automotive polish applied and removed with a soft, clean cloth will help fill scratches.

## **Suggested Polishes:**

- Johnson Paste Wax
- Mirror Glaze #10 Plastic Polish (by Mirror Bright Polish Co.)
- Novus Plastics Polish #1, #2 (By Novus Inc.)

# Weekly Procedures

- 1. Check all nuts and bolts for looseness. Tighten as required.
- 2. Inspect all belts (entire length) for any non-uniformity and wear.

Immediately replace belt if any of the following conditions are present:

	3D View	3D or Side View
• Peeling of the belt's skin.		
• Wave in the belt.		
Belt is necked down (narrow section).	Replace belt if any section is over 1/32" (.03") narrower than rest of the belt.	Examine edge of belt (both sides). Replace belt if any section is narrower than the rest.
• Cracks or splits.		\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
• One or more strands of kevlar hanging out. NOTE: Also replace belt if there is a significant amount of frayed kevlar.		

**3.** Some machines use cables in addition to belts. Inspect all cables for wear or damage and proper tension. When inspecting cables, run your fingers on the cable, paying particular attention to bends in the cable and attachment points.



WARNING: Replace all worn cables immediately. The following conditions may indicate a worn

A tear or crack in the cable sheath that exposes the cable. See Figure 1.




Figure 1.

A kink in the cable. See Figure 2.




Figure 2.

A curled sheath. See Figure 3.




Figure 3.

• "Necking", a stretched cable sheath. See Figure 4.




Figure 4.

4. Inspect bars and handles for wear, paying particular attention to tab area connecting points.

Replace all worn handles immediately.

**5.** Inspect snap links for proper latching (indicates wear).

Replace all worn snap links immediately.

6. Inspect for loose or worn grips.

Replace all loose or worn grips immediately.

7. Inspect all labeling for readability. This includes instructional placards, warning and caution decals.

Replace all worn labeling immediately.

**8.** Inspect all weight stacks for proper alignment and operation.

Correct all improper alignment and operation issues immediately.

**9.** Wipe *Weight Stack Guide Rods* clean over entire length. Lubricate with a light coat of medium weight automotive engine oil.

# **Yearly Procedures**

1. Replace all belts cables at least annually.

#### **Environment**

**Static Electricity -** Depending upon where you live, you may experience dry air, causing a common experience of static electricity. This may be especially true in the winter time. You may notice a static build-up just by walking across a carpet and then touching a metal object. The same can hold true while working out on your unit. You may experience a shock due to the build-up of static electricity on your body and the discharge path of the unit. If you experience this type of situation, you may want to increase the humidity to a comfortable level through the use of a humidifier.

**Humidity -** The unit is designed to function normally in an environment with a relative humidity range of 30% to 75%.

**NOTE:** Do not install or use the unit in an area of high humidity, such as in the vicinity of a steam room, sauna, indoor pool or outdoors. Exposure to extensive water vapor, chlorine and/or bromine could adversely affect the electronics as well as other parts of the machine.

**Temperature -** The unit is designed to function normally in an environment with an ambient temperature range of 50° F (10° C) to 104° F(40° C) degrees.

### **Storage**

**Humidity** - The unit can be shipped and stored in an environment with a relative humidity range of 10% to 90%.

**NOTE:** Do not store the unit in an area of high humidity, such as in the vicinity of a steam room, sauna, indoor pool or outdoors. Exposure to extensive water vapor, chlorine and/or bromine could adversely affect the electronics as well as other parts of the machine.

**Temperature -** The unit can be shipped and stored in an environment with an ambient temperature range of 32° F (0° C) and 140 F (60° C) degrees.

This page intentionally left blank.

Maintenance Page 5-8

# 6 - Service

Please refer to the next several pages for parts lists, exploded-view diagrams and cable and belt routing diagrams.



Use only Cybex replacement parts when servicing. Failure to do so could result in personal injury.


**NOTE:** All inspections and repairs must be performed by trained service personnel only.

Cybex will void warranty if non-Cybex replacement parts are used.

This page intentionally left blank.

# LAT PULLDOWN

PRODUCT NO. 12130

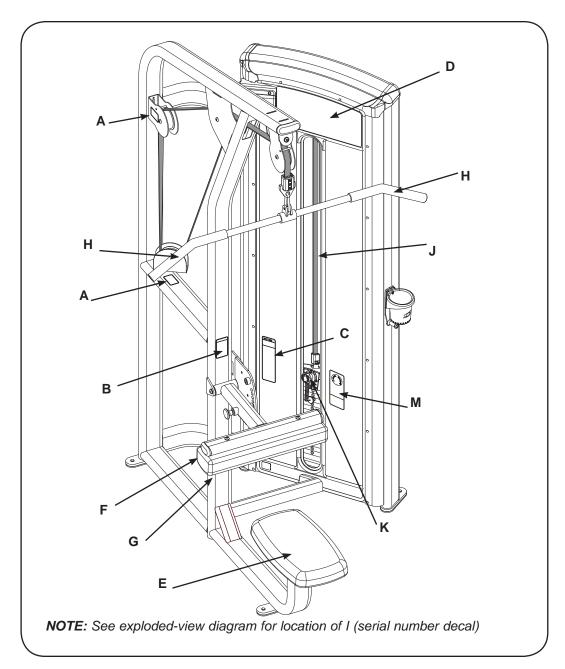



	DESCRIPTION	PART NO.		DESCRIPTION	PART NO.
B.	Caution Decal Warning Decal Warning Decal	8500-311-X	H.	Wear Cover (Item F) Grip Serial Number Decal	
D. E.	Placard Decal Seat Pad Thigh Pad w/Wear Cover	12130-598-X 4800-188	J. K. L.	Belt Weight Selector Pin Cybex Decal Increment Weight Decal.	BH030207 3900-442

30 1 CM000211 DECAL, PATENT PENDING 31 4 FB130212 STANDARD WEIGHT STACI 32 178.5" GB000202 STANDARD WEIGHT STACI 33 6 GP000209 PULLEY ASSEMBLY-3.50 34 1 GQ000206 SNAP LINK 35 6 HC700428 BHSCS .375-16 X 2.25 36 2 HC700430 PANEL FASTNER, 10-24 U 1 38 6 HN704901 LOCKNUT, .375-16 NYLON 39 4 HS347600 PANEL FASTNER, 10-24 U 1 4 HT570410 SCREW, PNH TORX 10-24 S 41 HX570412 BHSCS, 10-24 X .50 42 14 HX570412 BHSCS, 10-24 X .50 43 3 HY740000 SET SCREW, PNH TOOTH 48 1 HX570412 BHSCS, .375-16 X .50 45 JC700420 BHSCS, .375-16 X .50 46 2 JC700420 BHSCS, .375-16 X .50 47 4 JS347400 LOCKWASHER, INT TOOTH 48 1 PP130002 INSERT, DOMED PLASTIC 49 2 PR660005 BUMPER, WEIGHT 51 4800-196 THIGH PAD WWEARCOVER 52 1 4800-196 THIGH PAD WWEARCOVER 53 1 4800-403 WAATER BOTTLE HOLDER R 56 1 13000-4002 WATER BOTTLE HOLDER 57 1 13000-4002 WATER BOTTLE HOLDER 58 1 HT552515 TAP SCREW, 8-16 X .75 59 1 11040-790 DECAL, MADE IN U.S.A.	ITEM	QΤΥ	PART NO.	DESCRIPTION
4 FB130212 6 GB000202 6 GP000203 1 GQ000206 6 HC700428 14 HF579000 10 HT512517 4 HT570410 14 HX570412 10 HT55214 11 1000-407-X* 1 13000-402 1 HX60-633 1 HX60-633 1 HX700003 1 HX7000003 1 HX7000003 1 HX7000003 1 HX7000003 1 HX7000003 1 HX7000003 1 HX70000003 1 HX70000003 1 HX7000000000000000000000000000000000000	30	_	CM000211	DECAL, PATENT PENDING
178.5" GB000202 6 GP000209 1 GQ000206 6 HC700428 14 HF579000 6 HN704901 14 HF579000 10 HT512517 4 HT570410 14 HX570412 14 HX570412 17 JC700412 17 JC700420 1 JC700420 2 JC620412 2 JC620412 1 JC700420 1 HY740000 2 JC620412 2 JC700420 1 HY570003 1 HY740000 1 HY740000 2 JC700420 1 HY740000 1 HY750-196 1 HY750-400 1 HY755515 1 HY755515	31	4	FB130212	BUSHING, FLANGE .75 ID x .875 OD x .7LG
6 GP000209 1 GQ000206 6 HC700428 2 HC700430 14 HF579000 6 HN704901 10 HT512517 4 HX570410 14 HX570412 10 HT512517 10 HT512517 10 HT512517 10 HT512517 10 HT512517 10 HT512517 10 HT512517 10 HT51251 10 HT51251 11 HX500-402 11 HX500-402 11 HX500-402 11 HX500-402 11 HX500-402 11 HX500-402 11 HX500-402 11 HX552515 11 HX552515	32	178.5"	GB000202	STANDARD WEIGHT STACK BELT .95 WIDE
1 GQ000206 6 HC700428 2 HC700430 14 HF579000 6 HN704901 10 HT512517 4 HT552410 12 JC620412 13 HY740000 14 HY740000 15 JC620412 17 JC700412 17 JC700412	33	9	GP000209	PULLEY ASSEMBLY-3.50
6 HC700428 2 HC700430 14 HF579000 6 HN704901 10 HT512517 4 HT570410 11 HT552515 12 JC700420 2 JC700420 2 JC700420 1 HT552515 1 13000-400	34	_	GQ000206	SNAP LINK
2 HC700430 14 HF579000 6 HN704901 10 HT572517 4 HS70410 11 HX570412 3 JC620412 7 JC700420 2 JC700420 4 JS347400 1 PP130002 2 JC700420 1 JC700420 2 JC700420 2 JC700420 1 HX570412 6 JC700420 1 HX50002 2 HC60005 2 HC60005 1 HR00-196 1 4800-196 1 H000-407-X* 1 13000-400 1 HT552515 1 11040-790	32	9	HC700428	BHSCS .375-16 X 2.25
14 HF579000 6 HN704901 14 HS347600 15 HT570410 16 HT570410 17 JC700412 17 JC700412 18 JC820412 19 JC700420 10 JC700412 10 JC70	36	7	HC700430	BHSCS .375-16 X 2.50
6 HN704901 10 HT512517 4 HT570410 14 HX570412 14 HX570412 15 JC620412 16 JC700420 17 JC700420 1 JC700420 1 JC700420 2 JC700420 1 JC700420 2 JC700420 1 JC700420 1 JC700420 2 JC700420 1 JC700420 1 HT50-528 1 4800-196 1 HT60-407-X* II 1 1000-400	37	14	HF579000	PANEL FASTNER, 10-24 U TYPE
4 HS347600 10 HT512517 4 HT570410 14 HX570412 2 JC620412 2 JC700420 4 JS347400 1 PP130002 2 PP130002 2 PP130003 1 PP130003 2 PR060005 4 4800-198 1 4800-196 1 13000-402 1 13000-400 1 HT552515 1 11040-790	38	9	HN704901	LOCKNUT, .375-16 NYLON
10 HT512517 4 HT570410 3 HY740000 2 JC620412 6 JC700412 6 JS347400 1 PP130002 2 PR060005 2 PR060005 1 H800-196 1 13000-402 1 13000-400 1 HT552515 1 11040-790	33	4	HS347600	WASHER, SAE .375
4 HT570410 14 HX570412 3 HY740000 2 JC620412 7 JC700412 2 JC700420 4 JS347400 1 PP130002 2 PP130003 2 PR060005 2 PR060005 1 4800-196 1 13000-402 1 13000-400 1 HT552515 1 11040-790	40	10	HT512517	TAP SC 10-24 X 1.00 TYPE WB PN HD P BLK
14 HX570412 3 HY740000 2 JC620412 7 JC700412 2 JC700420 4 JS347400 1 PP130002 2 PP060005 2 PR060005 2 4605-528 4 800-196 1 4800-196 1 13000-402 1 13000-400 1 HT552515 1 11040-790	41	4	HT570410	SCREW, PNH TORX 10-24 X .375, BLACK
3 HY740000 2 JC620412 7 JC700412 2 JC700420 4 JS347400 1 PP130002 2 PP130003 2 PR060005 2 PR060005 1 4800-196 1 4800-196 1 13000-402 1 13000-400 1 HT552515 1 11040-790	42	14	HX570412	BHSCS, 10-24 X .50, SS
2 JC620412 7 JC700412 2 JC700420 4 JS347400 1 PP130003 2 PP060005 2 PR060005 2 4605-528 4800-188 1 4800-196 1 1000-407-X* 1 13000-400 1 HT552515 1 11040-790	43	က	HY740000	SET SCREW
7 JC700412 2 JC700420 4 JS347400 1 PP130003 2 PP130003 2 PP060005 2 4605-528 1 4800-188 1 4800-188 1 1000-407-X* 1 13000-402 1 13000-400 1 HT552515	4	7	JC620412	BHSCS .250-20 X .50
2 JC700420 4 JS347400 1 PP130002 2 PP000005 2 PR060005 2 4605-528 1 4800-188 1 4800-196 1 1000-407-X* 1 13000-402 1 13000-402 1 11040-790	45	7	JC700412	BHSCS .375-16 X .50
4 JS347400 1 PP130002 2 PP130003 2 PR060005 2 4605-528 1 4800-188 1 14000-407-X* 1 13000-402 1 11040-790	46	7	JC700420	BHSCS .375-16 X 1.25
1 PP130002 2 PP130003 2 PR060005 2 4605-528 1 4800-196 1 4800-093 1 11000-407-X* 1 13000-402 1 11040-790	47	4	JS347400	LOCKWASHER, INT TOOTH .375
2 PP130003 2 PR060005 2 4605-528 1 4800-188 1 4800-196 1 11000-407-X* 1 13000-400 1 13000-400 1 HT552515 1 11040-790	48	_	PP130002	INSERT, DOMED PLASTIC
2 PR060005 2 4605-528 1 4800-188 1 4800-196 1 11000-407-X* 1 13000-402 1 13000-400 1 HT552515 1 11040-790	49	7	PP130003	INSERT, DOMED PLASTIC
2 4605-528 1 4800-188 1 4800-196 1 4800-093 1 11000-407-X* 1 13000-402 1 13000-400 1 HT552515 1 11040-790	20	7	PR060005	BUMPER, WEIGHT
1 4800-188 1 4800-196 1 4800-093 1 11000-407-X* 1 13000-400 1 17552515 1 11040-790	51	7	4605-528	GRIP 14.0 LG .X .940 ID .188W
1 4800-196 1 4800-093 1 11000-407-X* 1 13000-402 1 13000-400 1 HT552515 1 11040-790	25	_	4800-188	SEAT PAD
1 4800-093 1 11000-407-X* 1 13000-402 1 13000-400 1 HT552515 1 11040-790	23	_	4800-196	THIGH PAD w/WEARCOVER
1 11000-407-X* 1 13000-402 1 13000-400 1 HT552515 1 11040-790	54	_	4800-093	WEAR COVER
1 1300-402 1 1300-400 1 HT552515 1 1 11040-790	22	_	11000-407-X*	DECAL, INCREMENT WEIGHT
1 13000-400 1 HT552515 . 1 11040-790	26	_	13000-402	WATER BOTTLE HOLDER MOUNT
1 HT552515 1 1 11040-790 1	22	_	13000-400	WATER BOTTLE HOLDER
1 11040-790	28	_	HT552515	TAP SCREW 8-16 X .75
	29	_	11040-790	DECAL, MADE IN U.S.A.


PART NO. DESCRIPTION	11040-409 MOLDED BUMPER PAD	11040-440 KNOB	11040-568 CLAMP BLOCK INSERT	12000-466 PULLEY COVER	12000-391 CHANNEL, INCREMENT WEIGHT	12000-395 TOP CAP	12000-396 END CAP	12000-398 SPACER	12000-402 CHANNEL, INCREMENT WEIGHT	12000-411 PANEL INSERT	12020-202 CUSHION PIVOT	12020-313 DETENT PLATE	12020-336 DETENT PIN	12040-336 WT ROD .625 DIA X 68.625	12060-347 PIVOT PIN	12090-322 FOOT PAD	12100-303 BUMPER	12130-200 MAIN FRAME	12130-202 PULLEY TAB WELDMENT	12130-203 CLAMP	12210-347 GUIDE ROD CAP	12130-598-X* PLACARD VR 3 LAT PULL	12210-348 GUIDE ROD CAP	4000Y316-X* DECAL, CAUTION	4005-105 COATED PULLDOWN BAR	4605-381-X* DECAL, WARNING	8500-311-X* DECAL, WARNING	BS070201 COM SPRING .56 x .66 1.50 LG	
QTY PAR	1 110	1 110	1 110	1 1200	1 1200	1 1200	2 1200	4 1200	1 1200	1 1200	1 1202	1 1202	1 1202	2 120	2 1206	4 1209	2 1210	1 1213	1 1213	1 1213	2 122	1 1213	_	2 4000	1 4006	1 4605	1 8500	1 BS0	000000
ITEM	_	2	က	4	2	9	7	œ	6	10	7	12	13	14	15	16	17	18	19	20	21	22	23	24	25	56	27	28	


\*Language Key
1-German
2-French

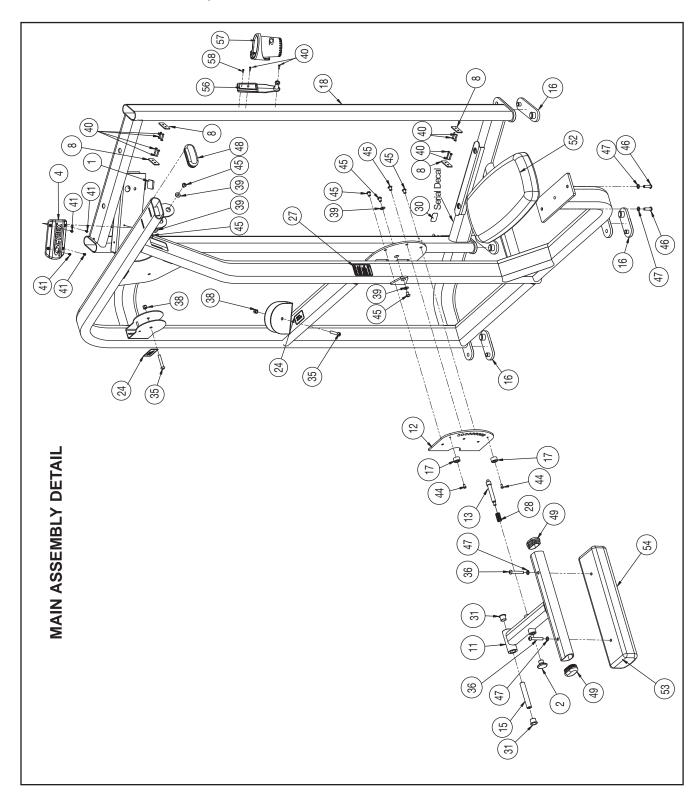

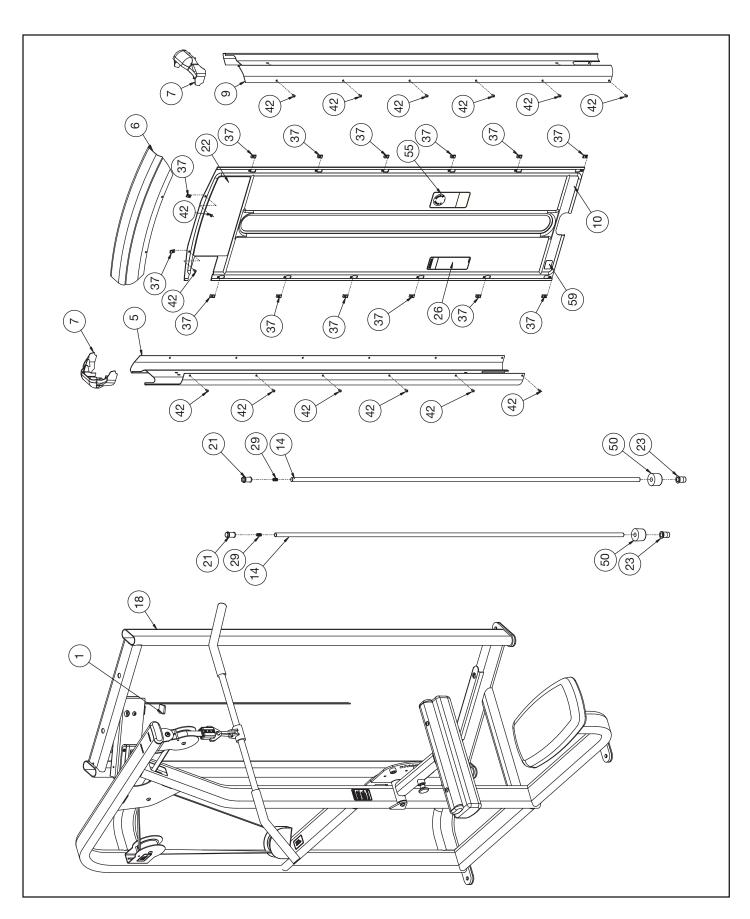

Service Page 6-6

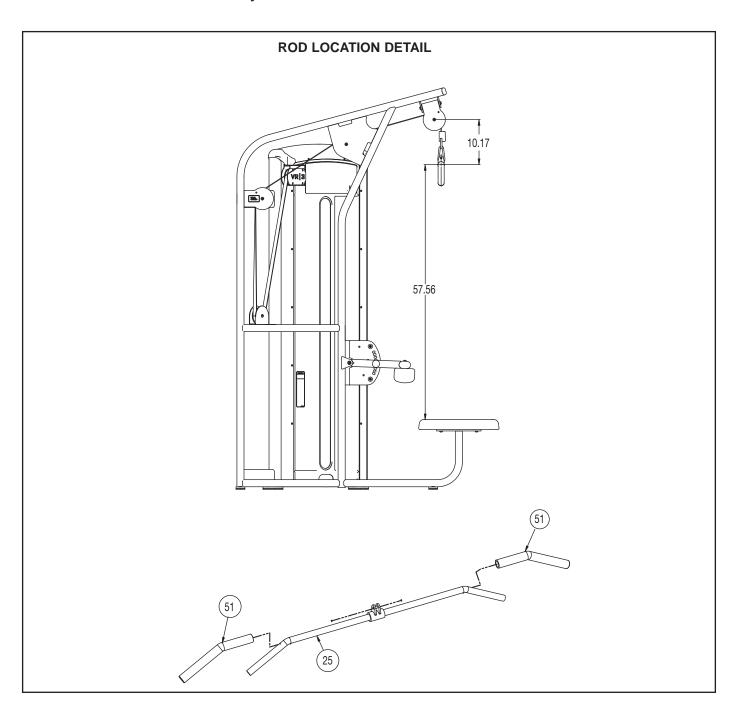

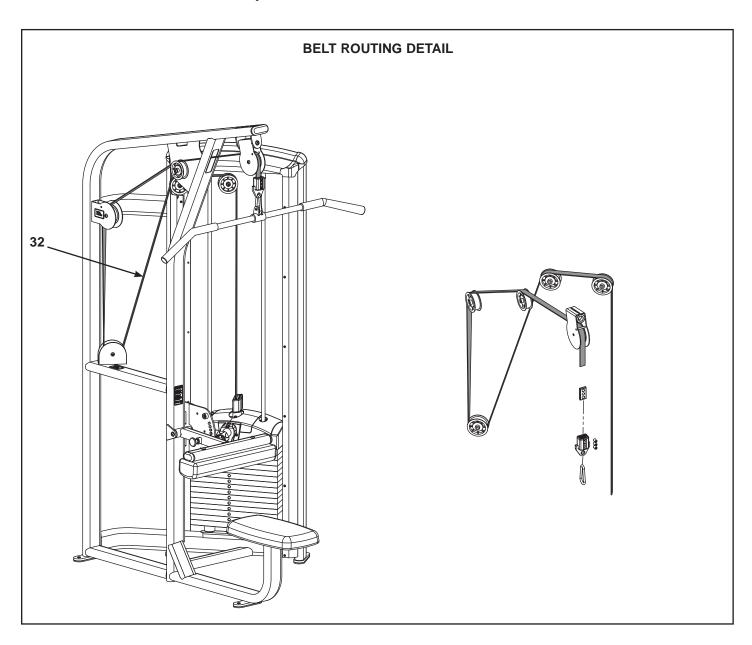


#### **Light Stack Assembly Configuration** 12020-020 **ITEM** PART NO. **DESCRIPTION** 11040-007 Top Weight Assembly 15 1 Support 2 12000-378 Panel, Insert 3 12000-384 1 2 12000-388 Extrusion, Inc Wt Channel 5 2 12102-330 Insert, Increment Weight 2 6 12210-351 Spacer Tube Plastic Insert 7 12210-352 8 3900-441 Decal, Cybex 1 (11)9 10 HF579000 Panel Fastner, 10-24 U Type (9) 10 2 HS760106 Washer, Flat, 1.75 X .688 X .140 T 15 BHSCS, 10-24 X .50, SS 11 HX570412 (11) 12 2 JS497600 Washer, 1.19ID X 1.75 OD X .12 THK 2 13 11040-409 Molded Bumper Set Screw 14 3 HY740000 (8) 15 1 11040-216 Belt Clamp 11040-301 Belt Clamp insert 16 1 (9) (11)TOURQUE SET SCREWS 300-350 IN./LBS (16)(9) (11)(11)-(9) (11)(1)(10) (6) (4) (10) (13) 6 (12)

# **Heavy Stack Assembly Configuration** 12020-021 ITEM QTY PART NO. **DESCRIPTION** Top Weight Assembly 15 11040-007 2 12000-378 Support 3 12000-384 Panel, Insert 4 Extrusion, Inc Wt Channel 2 12000-388 5 2 12102-330 Insert, Increment Weight 6 3900-441 Decal, Cybex 7 HF579000 Panel Fastner, 10-24 U Type 12 15 HX570412 BHSCS 10-24 x 50 SS 9 2 11040-409 Molded Bumper 10 Set Screw 3 HY740000 (8) Belt Clamp 11 11040-216 (8) 12 11040-301 Belt Clamp insert (8) TORQUE SET SCREWS 300-350 IN./LBS (10)(10)(3)

# 12430 VR3 Lat Pull Graduated Stack Assembly Configuration 12301-007 Assembly

ITEM	QTY	PART NO.	DESCRIPTION
1	1	11040-216	Belt Clamp
2	1	11040-301	Belt Clamp Insert
3	2	13000-364	Bearing, Flange
4	1	4700-266	Top Weight 15- 3 x 12
5	1	BH030207	Pin, Weight Selector
			-
1			


ITEM	QTY	PART NO.	DESCRIPTION
6	2	BR030206	Ring, Retaining
7	2	BR030220	Retaining Ring 1.250 Internal
8	2	HS720004	Washer, Felt
9	3	HY740000	Set Screw
10	181.5"	GB000202	Weight Stack Belt .95 Wide (Not Shown)

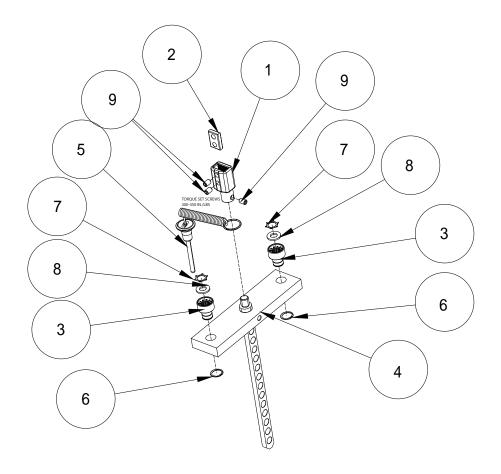

# Top Weight Assembly (Light Stack and Heavy Stack Configurations)

ITEM	QTY	PART NO.	DESCRIPTION
1	1	11040-366	Top Weight Assembly, Molded
2	1	11040-367	Hub, Molded
3	2	11040-369	Rod, Linkage
4	2	11040-370	Pin
5	1	11040-427	Rod
6	1	11040-426	Stem
7	1	11040-424	Cover Plate
8	1	11040-416	Cover, Top Weight
9	1	11040-425	Knob
10	1	BH030207	Pin, Weight Selector
11	1	4700-251	Lifting Post 15
12	4	BR030209	External Retaining Ring .188
13	2	BR030220	Internal Retaining Ring 1.250
14	1	HP016820	Cotter Pin .125 X 1.25
15	1	HP266765	Roll Pin, .125 X .938
16	2	HS720004	Felt Washer, .641 1.250 .125 T

ITEM	QTY	PART NO.	DESCRIPTION
17	4	HT562715	Tap SC NO 10 x .750 F Phil
18	4	HT582510	Tap SC NO 10 x .375 PN HD Phil
19	2	11040-409	Molded Bumper Pad
20	12	11040-572	Guard, Increment Weight
21	6	11040-573	Weight Increment
22	1	11040-216	Belt Clamp
23	1	11040-301	Clamp Block Insert
24	1	11040-428	Adjustment Decal
25	1	11040-429	Rotaion Decal
26	1	HT552512	Screw, Pan HD Phil HD Self Tapping 8-16 x .50, Type WB
27	3	HY740000	Set Screw
28	11	4000C101	Weight Plate Light Stack
28	14	4000C101	Weight Plate Heavy Stack
29	1	12050-007	Light Weight Pack (Not Shown)
30	1	4701-013	Heavy Weight Pack (Not Shown)

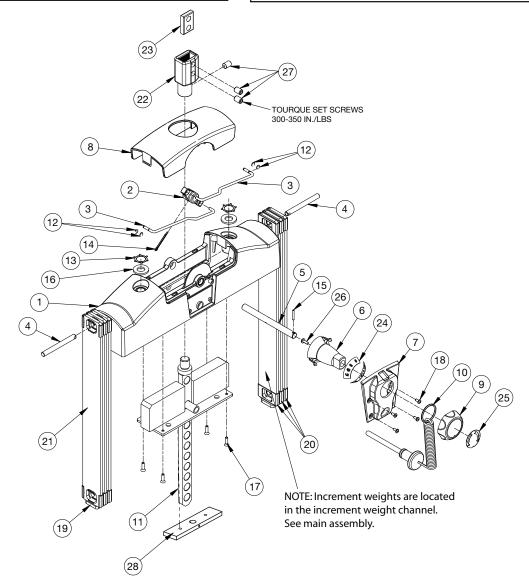

Service Page 6-12



